
## NOTES:

- TO COMPLY WITH ANSI Z358.1-2014 FOR EMERGENCY EYEWASH AND SHOWER EQUIPMENT:

   UNIT SHALL BE INSTALLED IN ACCORDANCE WITH MANUFACTURER'S INSTRUCTIONS AND ACCEPTABLE PLUMBING PRACTICES.
  - EYEWASH STREAMS SHALL BE POSITIONED SUCH THAT STREAMS ARE 15.3 CM (6 IN.) MINIMUM FROM THE WALL OR NEAREST OBSTRUCTION AND, WHEN FLOWING AT 30-30.5 PSI, MEET ANSI GAUGE REQUIREMENTS BETWEEN 83.8 & 134.6 CM (33-53 IN) ABOVE FLOOR.
- 2. AFTER INSTALLATION, CHECK EYEWASH FUNCTION TO ENSURE THAT THE UNIT IS STILL IN COMPLIANCE WITH THE REQUIREMENTS OF PERTINENT CODES AND STANDARDS (E.G., DIMENSIONS, ACTIVATION, FLOW CHARACTERISTICS, ETC.).



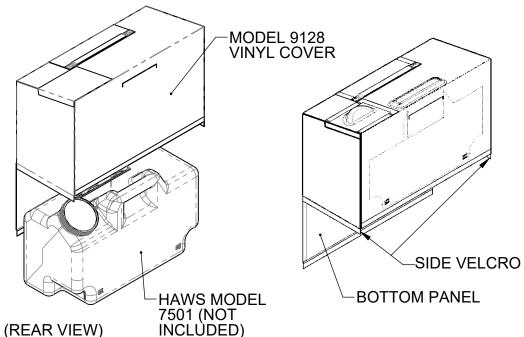


AGE

유

EMPTY THE 7501 PORTABLE EYEWASH IF IT IS NOT ALREADY EMPTY. PULL THE VINYL COVER OVER THE MODEL 7501 EYEWASH.

## STEP 2

CLOSE THE BOTTOM PANEL OF THE VINYL COVER AND ATTACH THE VELCRO ON EITHER SIDE.

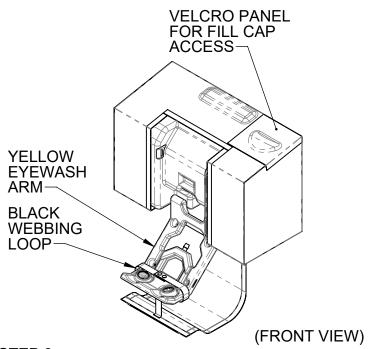

## STEP 3

OPEN THE FRONT VELCRO FLAP BY PULLING THE YELLOW STRAP. PULL THE YELLOW EYEWASH ARM DOWN ON THE 7501 AND ATTACH THE BLACK NYLON WEBBING LOOP AROUND THE EYEWASH ARM BELOW THE EYEWASH HEADS.

## STEP 4

MOUNT ASSEMBLED EYEWASH AND VINYL COVER IN ACCORDANCE WITH EYEWASH INSTALLATION INSTRUCTIONS.



1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCO.COM WEBSITE: WWW.HAWSCO.COM

ECN: REV. ECN: BY: MODEL(S)

DRAWN: DATE: CHK'D.:
JU 11/05/24 JU

ADDROVED: DATE:

9128, 7501 CLEAR VINYL COVER

PART NUMBER 0510002290 REVISION 1